

IFW60GL & -61GL	FL-1922
Rev. 4 (4/06)	Page 1 of 2

INSTALLATION and OPERATING INSTRUCTIONS for INFRA-RED FOOD WARMERS with FLEXIBLE ARMS, IFW60GL or HEAT-N-SERVE MODELS, IFW61GL


ELECTRICAL SPECIFICATIONS:

VOLTS	WATTS	AMPS	HERTZ	PHASE	NEMA
120	250	2	60	1	5-15
240	275	1.1	60	1	6-15

These models are listed by The National Sanitation Foundation under Standard 4

HOW TO INSTALL: IFW-60-GL with Base Clamp


These units can be attached to any flat surface on which the clamp-jaws can be fastened.

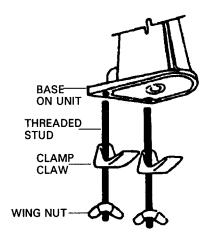

HOW TO INSTALL:

IFW-60-GL to the wall with Accessory Bracket

Fasten bracket securely to wall or any suitable vertical surface and plug cord into proper outlet.

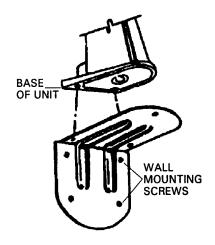

HOW TO CLEAN:



- 1. Let warmer cool before cleaning.
- 2. Unplug warmer from wall outlet.
- 3. Do NOT put warmer in water or spray with water.

Wipe off grease and food splatters **immediately** with a damp cloth and dish detergent.

CAUTION: Hood my be **HOT**!

EVERYDAY:

Wipe warmer hood, plastic-coated arm, and base with a damp cloth.

Do no use gritty cleaners unless really necessary.

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com


IFW60GL & -61GL	FL-1922
Rev. 4 (4/06)	Page 2 of 2




HOW TO INSTALL: IFW-61-GL to Cutting Board

Note: The bracket and fasteners are packed with the cutting board.

- 1. Screw the bracket (Item 1) to the IFW base (Item 2) with three flat-head screws (Item 3).
- 2. Put the IFW unit with bracket on the cutting board and fasten with wing screw (Item 4) into the side and with thumb screw (Item 5) from underneath the cutting board. Tighten securely.

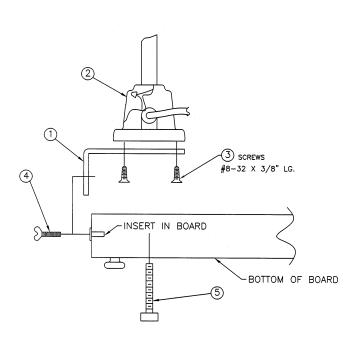

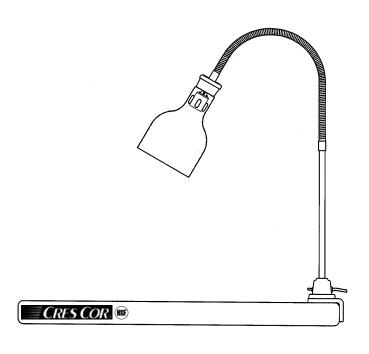

REPLACEMENT PARTS:

DESCRIPTION	CMP PART#
DESCRIPTION	CIVIL LAIVI#
Toggle Switch Seal	0808-051
Switch (120V)	0808-002C
Switch (240V)	0808-122
Power Supply Cord (120V)	0810-042
Power Supply Cord (240V)	0810-139
Clamp Bracket Assembly	0843-001
Lamp, Red (250 Watts)	0820-001
Lamp, White (250 Watts)	0820-033
Lamp, Red (275 Watts, 240V)	0820-014
Bun Pan, 18" x 26"	1038-043
Cutting Board Assembly	1415-004
Bracket Kit (IFW61GL)	
Wall Bracket (IFW60GL)	0844-002

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com